



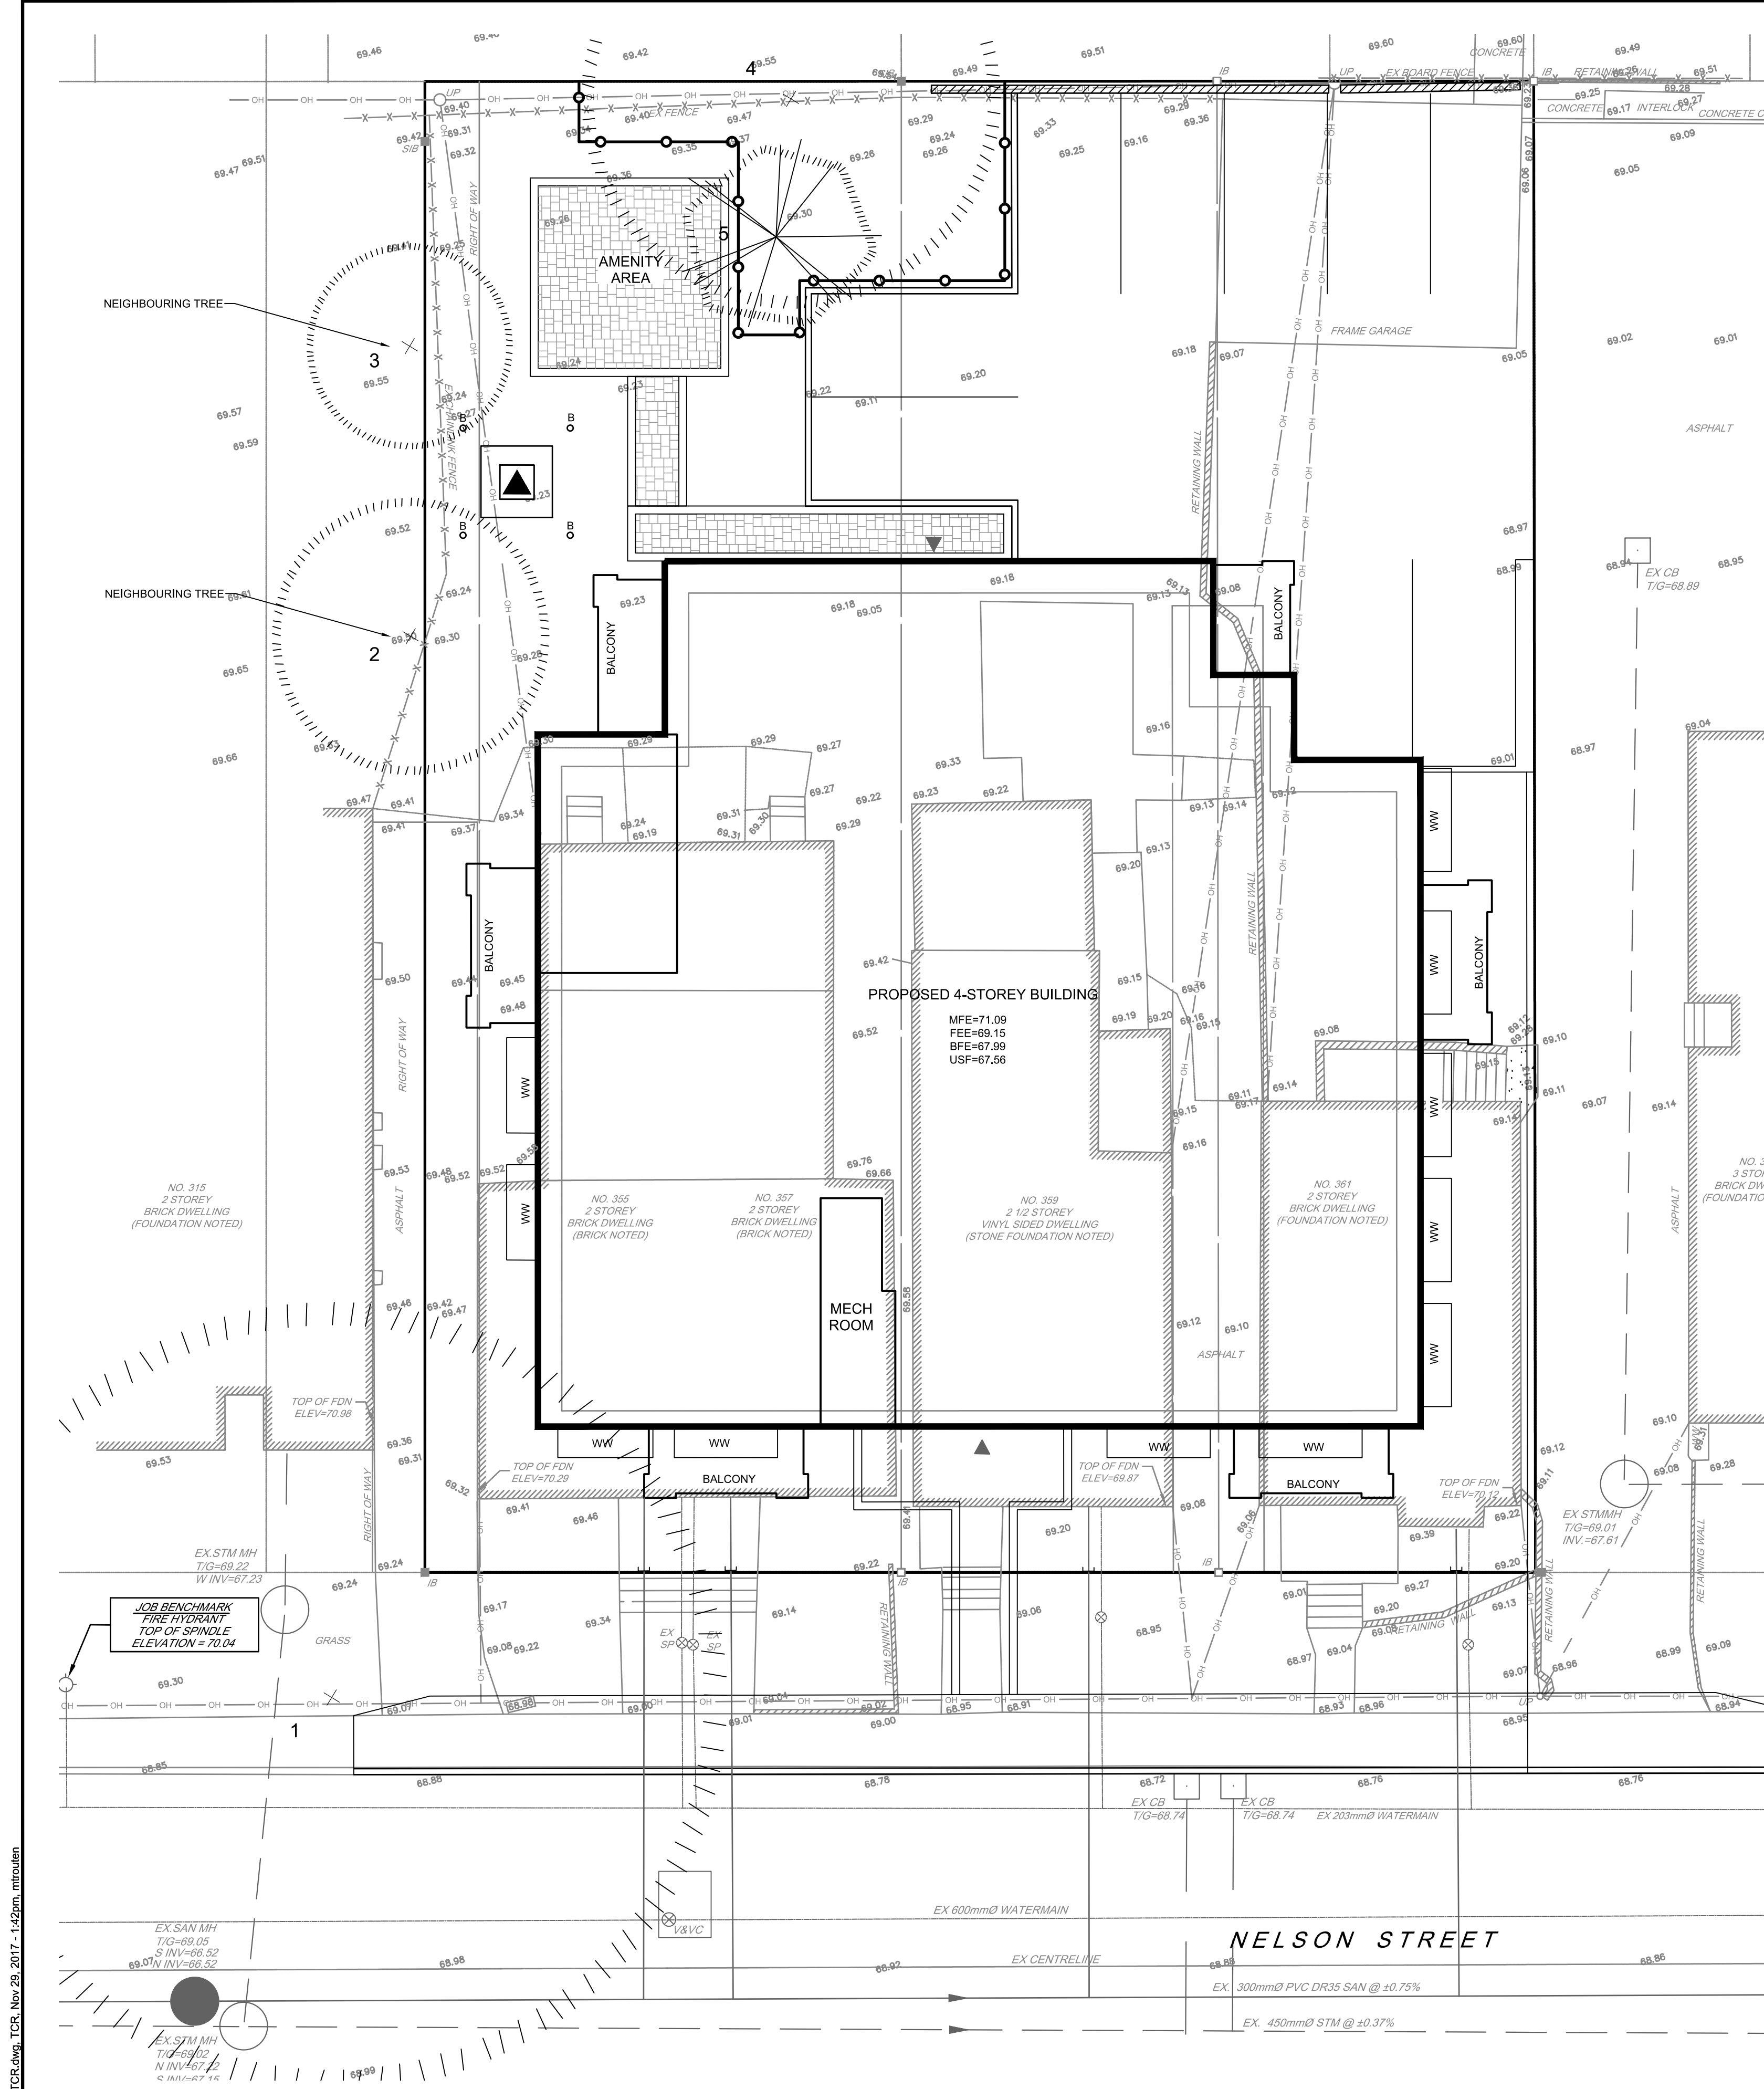

EXISTING TREE INVENTORY

No.	Botanical Name	Common Name	DBH (m)	CRZ (m)	Condition	Remarks	Recomm.
1	Tilia americana	Basswood	1.03	10.30	G	2 seams on main stem, OH Hydro pruning, main stem growing into curb, many small whiteface scars	Protect
2	Acer platanoides	Norway Maple	0.30	3.00	F	Several v-crotches at 1.5m AG, minor dieback	Protect
3	Acer platanoides 'Deborah'	Deborah Norway Maple	0.25	2.50	G		Protect
4	Acer negundo	Manitoba Maple	0.49	4.90	P	Conflict w/ Hydro Lines, main stem dead and broken at ±4m, severe lean/sweep on remaining stems, dieback	Protect
5	Picea glauca	White Spruce	0.22	2.20	G		Protect

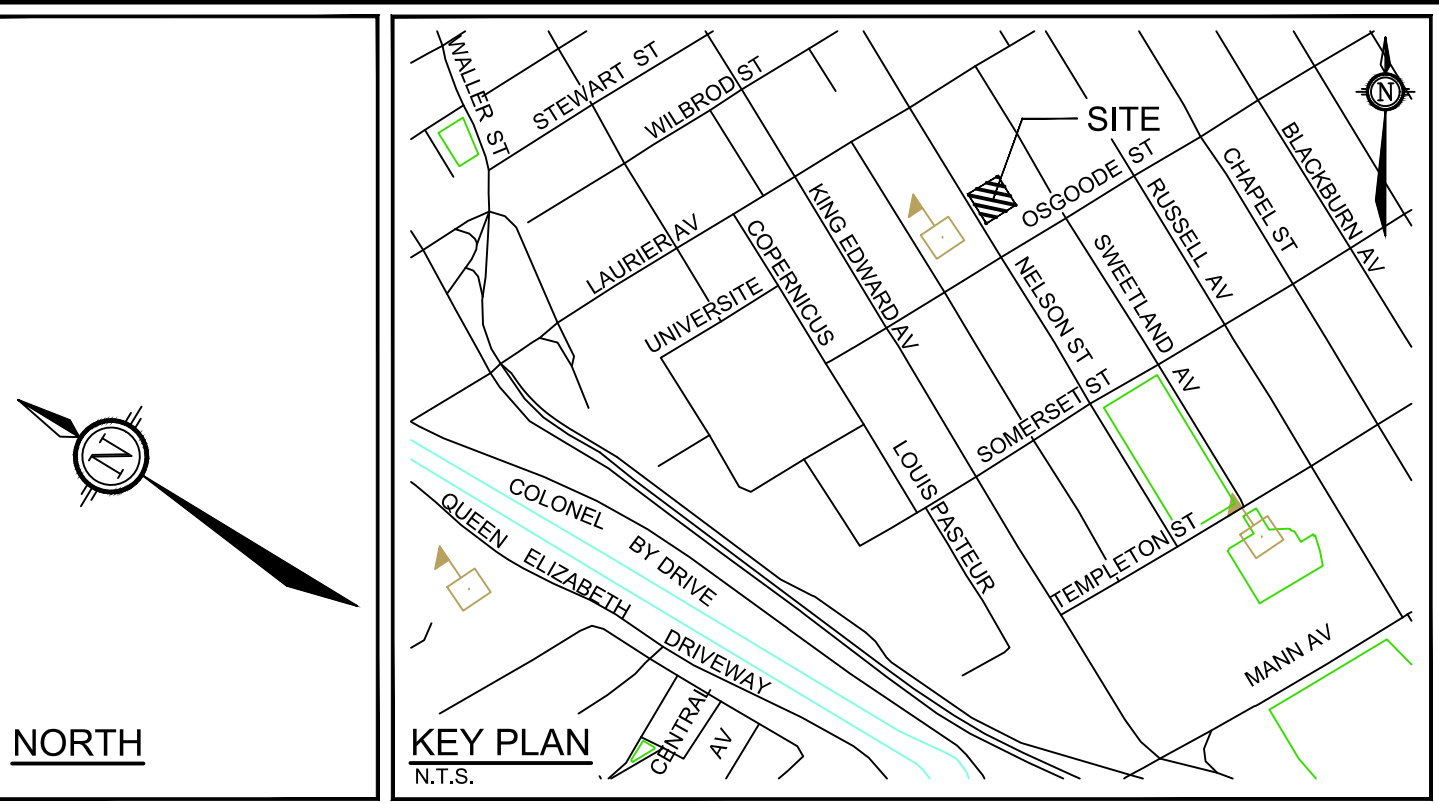


LANDSCAPE LEGEND:

- EXISTING TREE TO REMAIN
- EXISTING TREE TO REMOVE
- TREE PROTECTION FENCE

TREE PROTECTION NOTES

The following protection measures must be implemented for retained trees, both on site and on adjacent sites, prior to any tree removal or site works and maintained for the duration of construction on site:

- Under the guidance of a Landscape Architect or Certified Arborist, erect a fence at the critical root zone (CRZ) of trees where the CRZ is established as being 10 centimetres from the trunk of a tree for every centimetre of trunk diameter at breast height. The CRZ is calculated as DBH x 10cm. Refer to the Tree Protection Fence detail. See plan for fence location.
- When trees to be removed overlap with the CRZ of trees to be preserved: cut roots at the edge of the CRZ and grind down stumps after tree removals, do not pull out stumps. Ensure there is not root pulling or disturbance of the ground within the CRZ.
- If roots must be cut, roots 20mm or larger should be cut at right angles with clean, sharp horticultural tools without tearing, crushing, or pulling. Refer to City of Ottawa Specification S.P. F-8011 Tree Protection, Excavation of Root Zone.
- Hand work only where required within the CRZ; absolutely no machinery permitted.
- Do not place any material or equipment within the CRZ of any tree.
- Do not attach any signs, notices or posters to any tree.
- Do not disturb, raise or lower the existing grade within the CRZ without approval.
- Only tunnel or bore when digging within the CRZ of a tree.
- Do not damage the root system, trunk, or branches or any tree.
- Ensure that exhaust fumes from all equipment are directed away from any tree canopy.

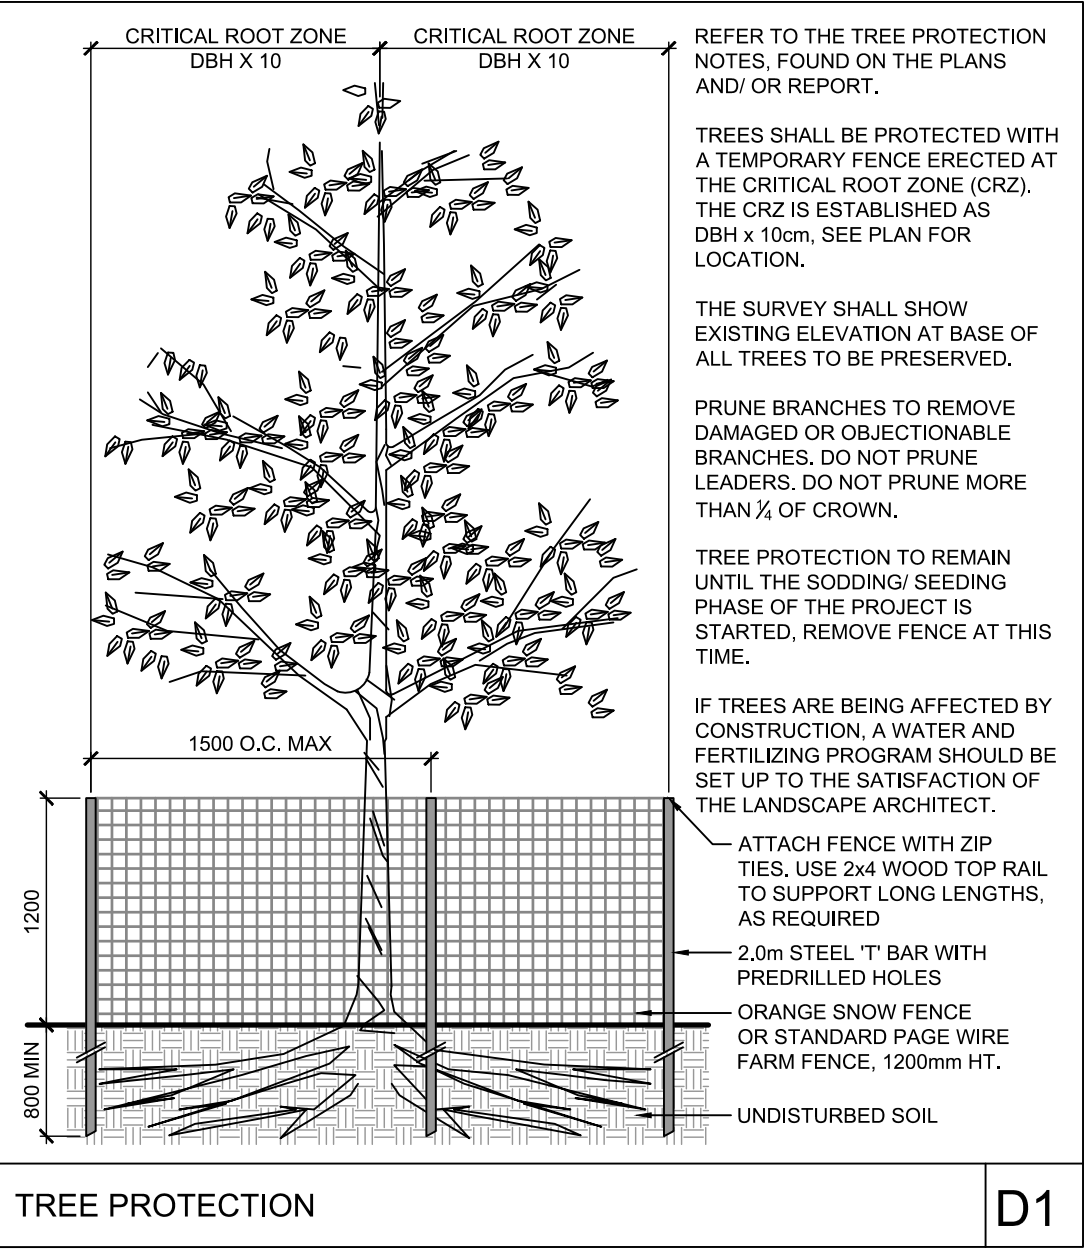


NOTE:
THE POSITION OF ALL POLE LINES, CONDUITS, WATERMAINS, SEWERS AND OTHER UNDERGROUND AND OVERGROUND UTILITIES AND STRUCTURES IS NOT NECESSARILY SHOWN ON THE CONTRACT DRAWINGS, AND WHERE SHOWN, THE ACCURACY OF THE POSITION OF SUCH UTILITIES AND STRUCTURES IS NOT GUARANTEED. BEFORE STARTING WORK, DETERMINE THE EXACT LOCATION OF ALL SUCH UTILITIES AND STRUCTURES AND ASSUME ALL LIABILITY FOR DAMAGE TO THEM.

NOT FOR
CONSTRUCTION

OWNER INFORMATION
A.F. MARTINS CONSTRUCTION
35 LINDEN TERRACE
OTTAWA, ONTARIO, K1S 1Z1
MS. TINA CAMPAGNA
PHONE: (613) 232-9820
TINACAMPAGNA@SYMPATICO.CA

1.	ISSUED FOR SPA	OCT 31/17	SC		
No.	REVISION	DATE	BY		

SCALE	DESIGN
1:100	SC
	SC
	MT
	SC
	RJ

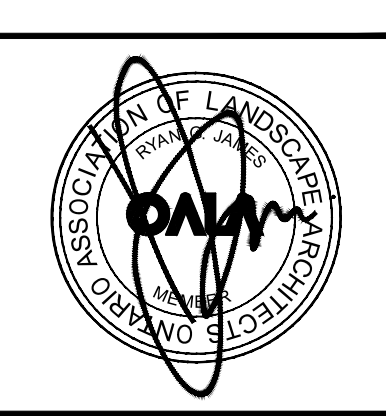

NOVATECH
Engineers, Planners & Landscape Architects
Suite 200, 240 Michael Cowland Drive
Ottawa, Ontario, Canada K2M 1P6
Telephone (613) 254-9643
Facsimile (613) 254-5867
Website www.novatech-eng.com

LOCATION
CITY OF OTTAWA
355, 357, 359 & 361 NELSON STREET

DRAWING NAME

TREE CONSERVATION PLAN

PROJECT NO.	116018-00
REV	REV # 1
DRAWING NO.	116018-TCR